



OXYSYNC™
Quick Start Guide

SYSTEM STARTUP

1. Locate the control screen and navigate to the **Zone control panel** tab.
2. Press the **Off** button.
3. Confirm the indicator changes to **On**.

When the indicator is green, the system is operating according to its programmed schedule.

ADJUSTING ALTITUDE

1. Open the **Altitude Equivalency Chart** on the display.
2. Select your desired elevation setting.
3. Press **Update Altitude**.

Lower equivalency = Higher oxygen concentration
Higher equivalency = Lower oxygen concentration

USING OXYBURST

1. Press the **Oxyburst** button.
2. The system will begin an immediate oxygen cycle.
3. Adjust duration as desired.

Oxyburst does not affect the daily schedule.

NORMAL OPERATION

- The system automatically adjusts oxygen levels.
 - After reaching the target level, the system will temporarily shut down for cooling.
 - Oxygen levels will gently decrease, then automatically rise again as part of the acclimation cycle.
 - No daily adjustments are required.
-

TROUBLESHOOTING BASICS

- Check the Control screen under the **Zone control panel**. Confirm the zone is showing “**ON**” for the desire zone.
- If the units are not running, double check the system is not in a programmed off cycle. This can be found under the **Zone control panel**. Press the three dots to the right under the Action column. Now press the **View Timer** option.
- Press the **Oxyburst** mode button to double check the units turn on and there is not a power issue (Tripped breaker, unplugged unit, ect.)
- Make sure to close doors and windows in the oxygenated zone.

If assistance is needed, contact your authorized service provider.
